





### **PUSHBUTTON BUBBLER**

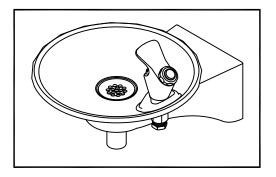

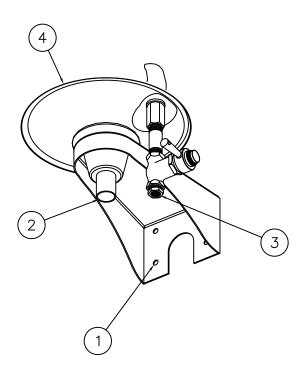


## OPTIONAL -PT1 1-1/4" O.D. P-TRAP

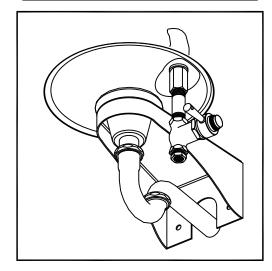


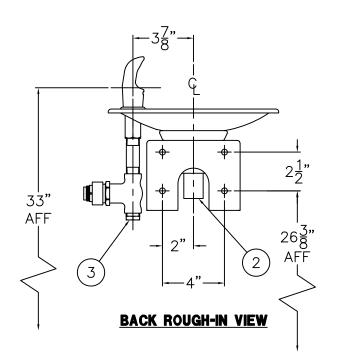

## **INSTALLATION INSTRUCTIONS:**

 - A- STRUCTURALLY REINFORCE THE WALL BEHIND THE FOUR 3/8" DIAMETER MOUNTING HOLES (1) AT THE DIMENSIONS SHOWN AND INSTALL WALL ANCHORS BY OTHERS.
- B- ROUGH-IN WASTE OUTLET FOR THE 1-1/4" OUTER DIAMETER PLAIN END TAILPIECE (2).
- C-ROUGH-IN WATER SUPPLY (3) AT DIMENSION SHOWN FOR 3/8" NPT FEMALE LEVER VALVE SUPPLY INLET. RECOMMENDED UNION AND SHUTOFF VALVE TO BE SUPPLIED BY OTHERS.
- D- CAREFULLY REMOVE FIXTURE (4) AND COMPONENTS FROM THE PACKAGING PREVENTING SCRATCHING AND DAMAGE.
- E- SECURELY ANCHOR FIXTURE (4) TO WALL THRU MOUNTING HOLES (1) WITH ANCHORING HARDWARE BY OTHERS.
- G-MAKE-UP 1-1/4" O.D. WASTE CONNECTION TO TAILPIECE (2).
- H- FLUSH WATER SUPPLY (3) BY OTHERS OF ALL DEBRIS PRIOR TO CONNECTING TO FIXTURE.
- I- CONNECT THE WATER SUPPLY (3) BY OTHERS TO 3/8" NPT FEMALE INLET. STOP ON THE SUPPLY IS RECOMMENDED.



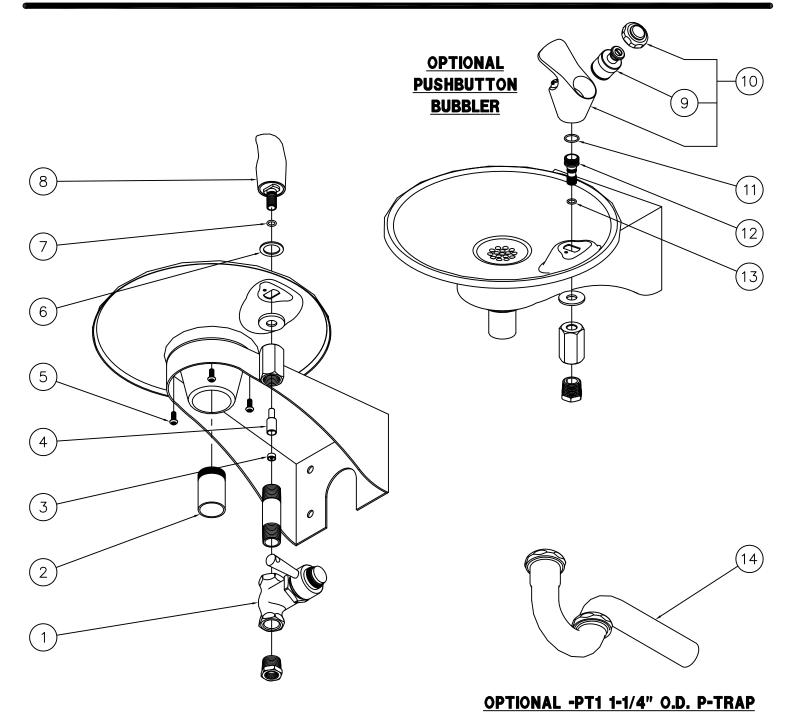

			SELF CLOSING LEVER VALVE	8	7018-112-199	SOLID STAINLESS STEEL BUBBLER		
	2	4952-002-000	1-1/4" OUTER DIAMETER TAILPIECE	9	7000-060-000	VALVE CARTRIDGE		
	3	0471-010-000	FLOW REGULATOR	10	2990-013-002	DECK MOUNTED SST PUSHBUTTON BUBBLER		
	4	7018-008-199	FLOW REGULATOR ADAPTER	11	0404-015-000	O-RING		
	5	0112-056-000	CENTER REJECT ALLEN BUTTON HEAD SCREW	12	7018-011-199	BUBBLER ADAPTER		
	6	7000-007-000	BUBBLER GASKET	13	0404-011-000			
	7	0404-011-000	O-RING	14	4953-002-000	1-1/4" x $1-1/4$ " OUTER DIAMETER P-TRAP		
IT	ЕМ	PART NUMBER	DESCRIPTION	ITEM	PART NUMBER	DESCRIPTION		
	AND COME OF THE PROPERTY OF TH							

MURDOCK—SUPER SECUR P.O. Box 3527 Industry, CA 91744 15125 Proctor Ave Industry, CA 91746 Phone: (800) 591–9880 MANUI www.murdock—supersecur.com

## ROUND BOWL WALL MOUNTED DRINKING FOUNTAIN


MANUFACTURE DATE	DATE ISSUED	DRAWING NUMBER
JANUARY 2006	10/21/08	
TO PRESENT	DATE REVISED	9938-250-5 <b>M</b> 0
IO PRESENT	05/20/16	

# STANDARD PUSH PAD / PUSH BUTTON DRINKING FOUNTAIN

### **CONDITION:**

### **SOLUTION:**

### NO WATER FLOW:

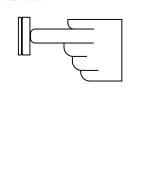


- 1.1 Check water main supply — open.
- 1.2 Inspect stop (by others) - open & no debris.
- Inspect in-line strainer for debris clean. 1.3
- 1.4 Replace valve cartridge.

## WATER DRIPS / WILL NOT SHUT OFF:



- 2.1 For push pad activated drinking fountains only: Open fixture and move valve bracket assembly further back from push pad.
- 2.2 Replace valve cartridge.

#### **REDUCED WATER FLOW:**

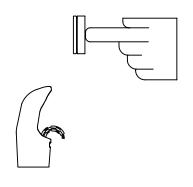

- 3.1 Adjust the valve flow rate. See appropriate fixture installation instructions.
- 3.2 Check water main supply for 20 psig minimum flow pressure.
- Inspect stop (by others) open & no debris.
- 3.4 Inspect in-line strainer for debris - clean.
- 3.5 Inspect bubbler for debris — clean.
- 3.6 Inspect all tubing for twists or kinks.
- 3.7 Replace valve cartridge.

MURDOCK-SUPER SECUR P.O. Box 3527 City of Industry, CA 91744 Phone: (800) 591-9880	
www.murdock-supersecur.com	MANUF
	ل ا

DRINKING F	OUNTAIN	VALVE	<b>MAINTENANCE</b>	<b>INSTRUCTIONS</b>
------------	---------	-------	--------------------	---------------------

MANUFACTURE DATE DATE ISSUED **JANUARY 2006** DATE REVISED

TO PRESENT

10/21/08

10/25/10

9940-200-0M1

DRAWING NUMBER