
# INSTRUCTIONS FOR MODELS **CPV-TV**

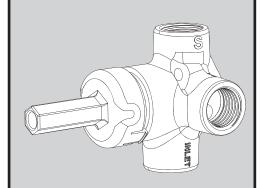

## **NEED HELP?**

For additional assistance or service please contact:

**SPEAKMAN®** Company 400 Anchor Mill Road New Castle, DE 19720



عُرِينَ<sup>1</sup> 800-537-2107



customerservice@speakman.com



www.speakman.com

92-CPV-TV-01

# TOOLS AND SUPPLIES


Pipe Slip Joint Wrench Wrench



Thread Seal

Tape

#### **HELPFUL TOOLS & SUPPLIES:**

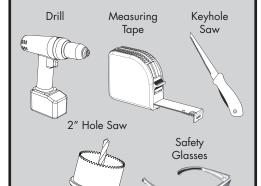



# **IMPORTANT**



- Do not over tighten any connections or damage may occur.
- Be sure to read instructions thoroughly before beginning installation.
- This transfer valve has an operating range of 20-80 psi.

#### SAFETY TIPS



Cover your drain to prevent loss of parts. Be sure to wear eye protection while cutting pipe.

#### **MAINTENANCE**




Your new Transfer Valve is designed for years of trouble-free performance. The diverter cartridge has a ceramic disc construction and requires no maintenance.

#### WARRANTY

0


Additional warranty information can be found at: www.speakman.com

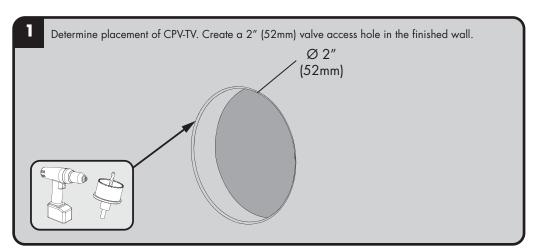

# **SUPPLY CONNECTION LAYOUT**

Shut off water supplies. Position the Transfer Valve correctly in the wall with the outlet port marked "S" facing up as shown below. See the Rough-In Diagram for proper positioning. Wrap Thread Seal Tape around all pipe threads in a clockwise direction. Make connections to the Transfer Valve and wrench tighten. Properly secure piping to surrounding structure.



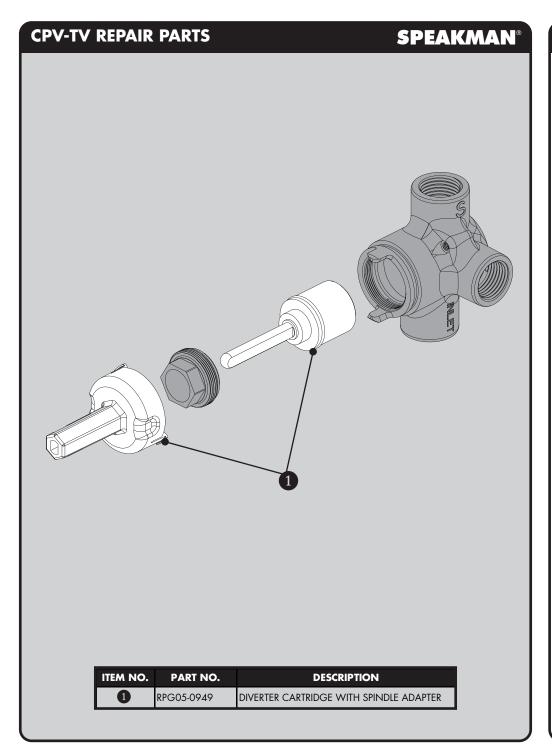

# **CPV-TV ROUGH-IN DIAGRAM**

# **SPEAKMAN®**

# **NOTES:**


### COMPLIANCE:

ASME A112.18.1/CSA B125.1

# **CONNECTIONS:**

- Inlet: 1/2" NPT Female
- Outlets: ½" NPT Female

Contractor to supply necessary inlet connections.

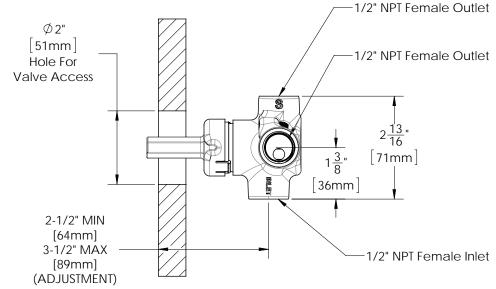

DIMENSIONS SUBJECT TO CHANGE WITHOUT NOTICE.