


#### **INSTALLATION INSTRUCTIONS:**

A- PROVIDE 30" SQUARE MINIMUM x 6" DEEP MINIMUM CONCRETE SLAB BY OTHERS TO SECURELY ANCHOR FIXTURE. INSTALL THE FOUR PROVIDED CONCRETE ANCHORS (1) AT DIMENSIONS SHOWN TO MATCH HOLES (2) IN FIXTURE BASE.


WASTE BY **OTHERS** 

- B- ROUGH-IN WASTE OUTLET (3) AT DIMENSION SHOWN FOR 1-1/4" PVC PIPE SIZE OR USE THE COMPRESSION ADAPTER PROVIDED LOOSE FOR 1-1/4" OUTER DIAMETER TUBE.
- C- ROUGH-IN WATER SUPPLY (4) WITHIN THE BOTTOM OPENING FOR CONNECTION TO VALVE USING SUPPLIED 6" LONG FLEX HOSE WITH 1/2" NPS FEMALE END WHICH WILL ACCOMODATE 1/2" NPT MALE ADAPTER.
- D- CAREFULLY REMOVE THE FIXTURE AND COMPONENTS FROM THE PACKAGING PREVENTING SCRATCHING AND DAMAGE.
- E- REMOVE BACK ACCESS PANEL (5) FROM FIXTURE PEDESTAL (6) & BOTTOM ACCESS PANEL (7) FROM CANTILEVER (8). ENSURE PUSHBUTTONS (9), WASTE PIPING (10), AND BUBBLERS (11) ARE SECURE AND CHECK ALL THE TUBING CONNECTIONS MAKE SURE THEY DID NOT COME LOOSE IN SHIPMENT.

- F- SET PEDESTAL 6 IN PLACE ALIGNING BASE HOLES (2) WITH THE INSTALLED ANCHORS (1) AND SECURE WITH THE 1/2" UNC HARDWARE (12) PROVIDED.
- G- ASSEMBLE CANTILEVERS (8) TO PEDESTAL (6) USING THE HARDWARE (13) PROVIDED PASSING THE BUBBLER & BUTTON TUBING, AND PIPING (10) THRU PEDESTAL (6) OPENING.
- H- MAKE-UP WASTE CONNECTION TO THE WASTE PIPING (10).
- I- INSTALL AIR-CONTROL VALVE WITHIN PEDESTAL USING THE HARDWARE PROVIDED. CONNECT 1/4" O.D. TUBING COMING FROM 1/4 TURN VALVES AND 1/8" O.D. TUBING FROM PUSH-BUTTON'S TO VALVE. NOTE: ONLY HANDTIGHTEN FERRULE NUTS.
- J- FLUSH WATER SUPPLY (4) BY OTHERS OF ALL DEBRIS PRIOR TO CONNECTING TO VALVE.
- K- CONNECT WATER SUPPLY (4) BY OTHERS TO VALVE USING SUPPLIED 1/2" NPS FLEX HOSE.
- L- TEST OPERATION OF BUBBLERS BY DEPRESSING BUTTONS (9) ADJUST FLOW RATE AS REQUIRED USING IN-LINE 1/4 TURN VALVES. CHECK ALL CONNECTIONS AND WASTE PIPING FOR LEAKS. CORRECT IF PRESENT.
- M-RE-INSTALL BACK ACCESS PANEL (5) AND BOTTOM ACCESS PANEL (7)



**REPAIR PARTS DRINKING FOUNTAINS** 

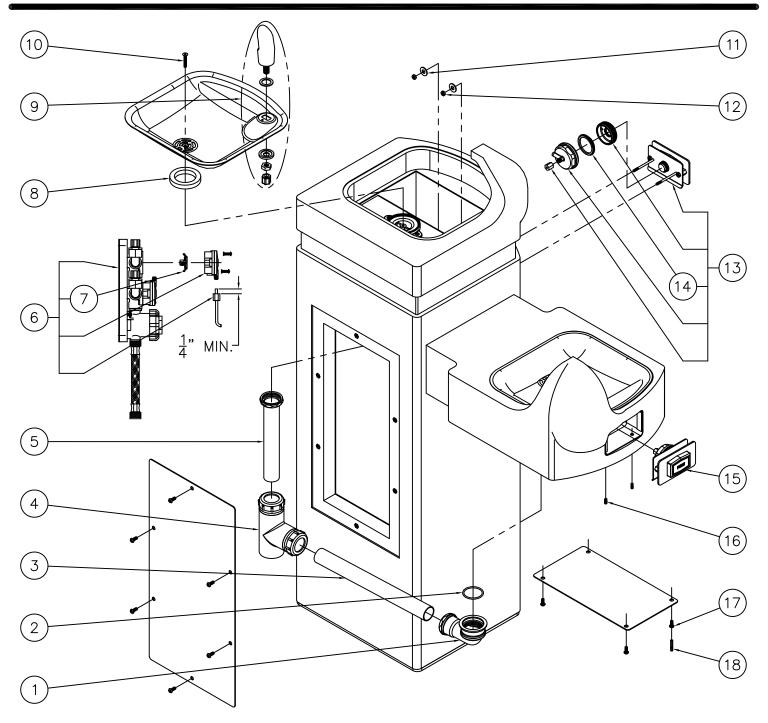

| 1                         | 7000-017-001 | ELBOW ASSEMBLY                       | 10   | 0152-010-000 | CENTER REJECT ALLEN FLAT HEAD SCREW  |  |  |  |
|---------------------------|--------------|--------------------------------------|------|--------------|--------------------------------------|--|--|--|
|                           | 0401-128-000 |                                      | 11   | 0331-006-000 | STAINLESS STEEL WASHER               |  |  |  |
| 3                         | 7000-111-199 | 1-1/4" O.D. x $14$ " LONG DRAIN TUBE | 12   | 0302-003-000 | 8/32" UNF STAINLESS STEEL HEX NUT    |  |  |  |
| 4                         | 7002-011-001 | BI-LEVEL ADULT ADA TEE ASSEMBLY      | 13   | 7031-160-001 | STONE FOUNTAIN PUSHBUTTON ASSEMBLY   |  |  |  |
|                           |              | 1-1/4" OUTER DIAMETER TAILPIECE      | 14   | 2566-001-000 | PUSHBUTTON DIAPHRAGM                 |  |  |  |
| 6                         | 2590-010-001 | S/T NON-METERING AIR-CONTROL VALVE   | 15   | 6154-035-002 | STONE CANTILEVER PUSHBUTTON ASSEMBLY |  |  |  |
| 7                         | 2563-010-001 | WATER DIAPHRAGM ASSEMBLY             | 16   | 0186-008-000 | 10-32 x 3/8" LONG SET SCREW          |  |  |  |
|                           |              | FLAT DRAIN ADAPTER GASKET            |      |              | CENTER REJECT ALLEN BUTTON HD SCREW  |  |  |  |
| 9                         | 7000-012-001 | STAINLES STEEL BUBBLER               | 18   | 0296-025-199 | CENTER REJECT HEX DRIVER BIT         |  |  |  |
| ITEM                      | PART NUMBER  | DESCRIPTION                          | ITEM | PART NUMBER  | DESCRIPTION                          |  |  |  |
| MURDOCK-SUPER SECUR TITLE |              |                                      |      |              |                                      |  |  |  |

MURDOCK-SUPER SECUR P.O. Box 3527 Industry, CA 91744 15125 Proctor Ave Industry, CA 91746 Phone: (800) 591-9880 www.murdock-supersecur.com

## SQUARE OUTDOOR STONE PEDESTAL BI-LEVEL DRINKING FOUNTAIN

MANUFACTURE DATE DATE ISSUED 05/08/07 **JANUARY 2006** DATE REVISED TO PRESENT 04/04/16

DRAWING NUMBER


9938-225-500

## PUSH PAD / PUSH BUTTON FRU FREEZE RESISTANT DRINKING FOUNTAINS NON-METERING AIR-CONTROLLED VALVE - (DIRECT ACTING)

## CONDITION:

## **SOLUTION:**

#### NO WATER FLOW:

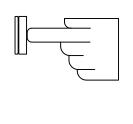


- 1.1 Check water main supply — open.
- 1.2 Inspect checkstops - open.
- 1.3 Inspect checkstop strainer for debris — clean.
- Check 1/8" O.D. tubing and fittings for leaks. 1.4
- 1.5 Check pushbutton air diaphragm for holes.
- 1.6 Check servomotor diaphragm center hole for blockage.

## WATER DRIPS / WILL NOT SHUT OFF:




- 2.1 Check servomotor diaphragm offset hole for debris.
- 2.2 Check servomotor seat for build-up or damage.
- 2.3 Check servomotor seat o-ring for damage.
- 2.4 Check servomotor plate and diaphragm for obstruction.

## REDUCED WATER FLOW:

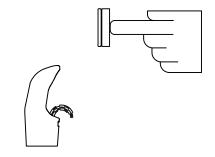

- 3.1 Check water main supply for 20 psig minimum flow pressure.
- 3.2 Check valve riser tubing for crimping.
- 3.3 Inspect checkstop strainer for debris — clean.
- 3.4 Check valve flow control for blockage — clean.
- 3.5 Inspect bubbler for debris — clean.

## PREMATURE WATER SHUTOFF:

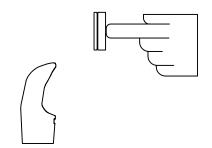

- 4.1 Check 1/8" O.D. tubing and fittings for leaks.
- Check pushbutton air diaphragm for holes.

Refer to Air-Controlled Valve Maintenance Detail on drawing # 9940-203-001 for -FRA\_ Above Ground units and on drawing # 9940-204-001 for Stone & -FRU\_Below Ground units to locate solutions above.

MURDOCK—SUPER SECUR P.O. Box 3527 Industry, CA 91744 15125 Proctor Ave Industry, CA 91746 Phone: (800) 591-9880 www.murdock—supersecur.com

# FRU FREEZE RESISTANT FOUNTAIN VALVE MAINTENANCE INSTRUCTIONS

DATE ISSUED

MANUFACTURE DATE **JANUARY 2006** TO PRESENT

10/20/05 DATE REVISED


03/15/16

9940-202-001

DRAWING NUMBER



# PUSH PAD / PUSH BUTTON BELOW GROUND FREEZE RESISTANT DRINKING FOUNTAINS NON-METERING AIR-CONTROLLED VALVE - (DIRECT ACTING)

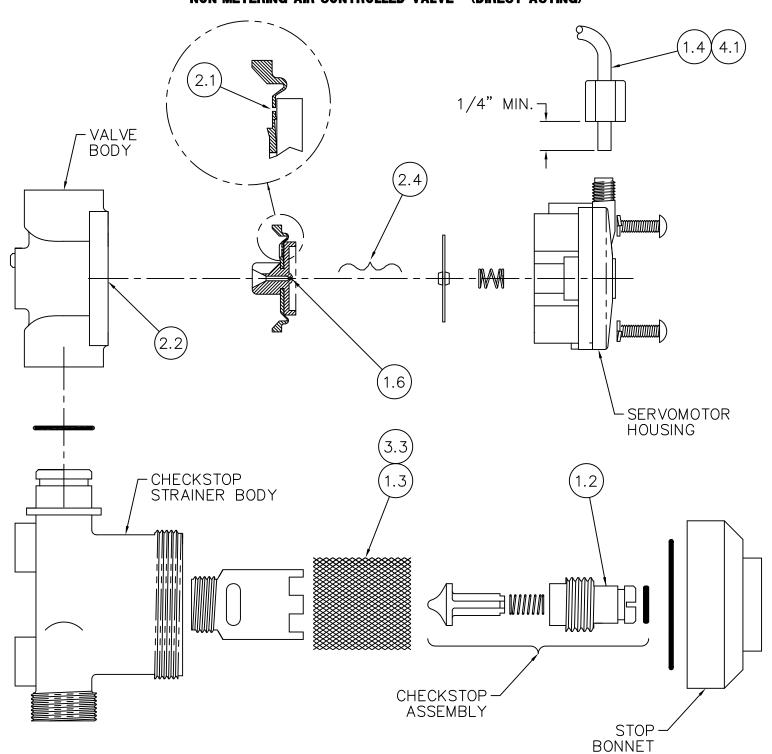

## **CHECKSTOP STRAINER - SERVOMOTOR DETAIL**

Refer to drawing #9940-202-001 for Valve Maintenance Instructions numbered solutions detailed above.

|      | MURDOCK-SUPER SECUR<br>P.O. Box 3527 Industry, CA 91744<br>15125 Proctor Ave Industry, CA 91746 | NON-METERING FRU AIR-C | CONTROLLED VALVE MAIN | ITENANCE INSTRUCTIONS |
|------|---|------------------------|-----------------------|-----------------------|
| mure | Phone: (800) 591-9880 www.murdock-supersecur.com  | MANUFACTURE DATE       | DATE ISSUED           | DRAWING NUMBER        |
|      |   | JANUARY 2006           | 12/07/05              |                       |
| 3/4  |   | TO PRESENT             | DATE REVISED 03/15/16 | 9940-204-001          |