



Z1335 WALL HYDRANT Parts Assembly and Parts List

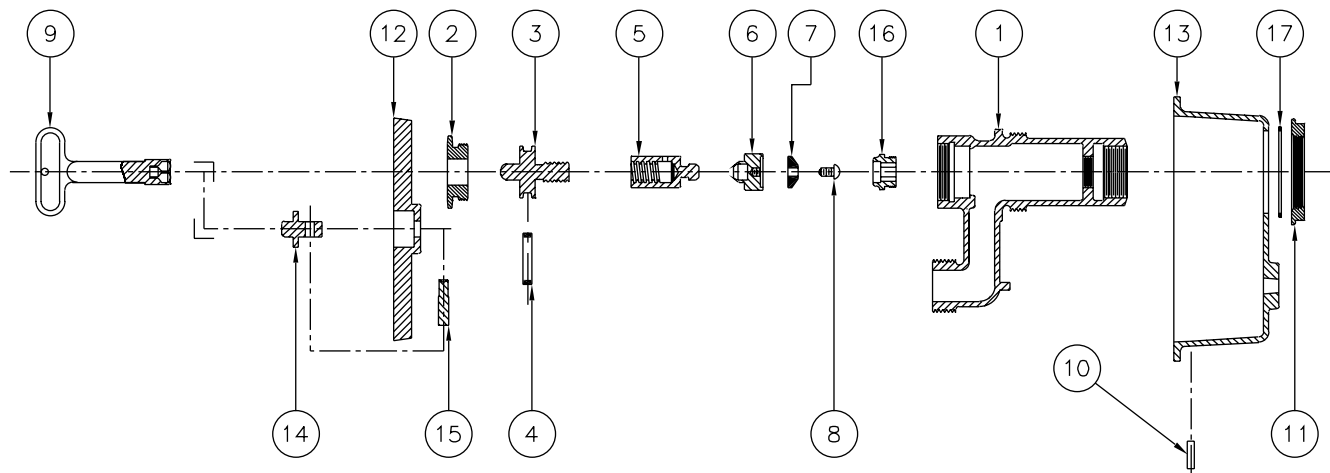

Z1335 Parts List

| Item | Description | Qty. | Part No. |
|------|----------------------|------|-----------|
| 1 | Head | 1 | 25331-001 |
| 2 | Face Nut | 1 | 22156-002 |
| *3 | Operating Screw | 1 | 25049-001 |
| *4 | O-Ring | 1 | 23750-028 |
| *5 | Operating Coupling | 1 | 25330-001 |
| *6 | Washer Guide | 1 | 25050-001 |
| *7 | Washer | 1 | 23075-001 |
| *8 | Screw #10-24 NC | 1 | 14853-042 |
| *9 | Hydrant Key | 1 | 59546-001 |
| 10 | Hinge Pin | 2 | 45553-011 |
| 11 | Locknut | 1 | 25242-001 |
| 12 | Hydrant Cover | 1 | 26135-001 |
| 13 | Hydrant Body | 1 | 25301-001 |
| 14 | Locking Pin Mounting | 1 | 25306-001 |
| 15 | Locking Pin | 1 | 25307-001 |
| *16 | Removable Seat | 1 | 25262-001 |
| 17 | Gasket | 1 | 21425-060 |

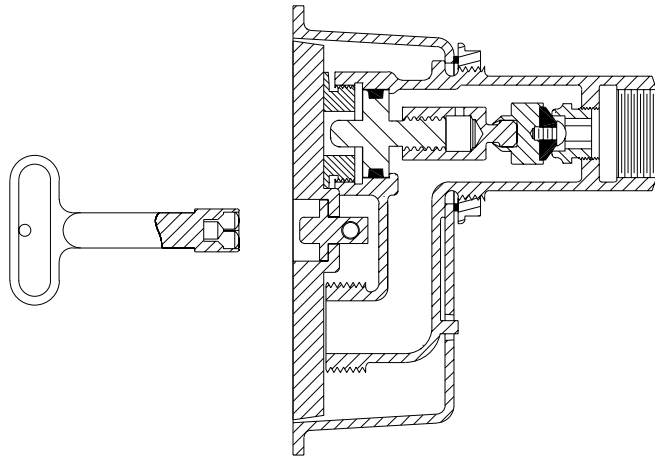

*Items are available in -RK Repair Kit Option bag (#66955-205-9).

Z1335 WALL HYDRANT Troubleshooting Guide

Z1335 Troubleshooting Guide

| PROBLEM | CAUSE | SOLUTION |
|--|--|--|
| Hydrant will not operate when turned on. | Water supply is shut off. | Turn on water supply. |
| Cannot turn the hydrant on with key. | Hydrant hasn't been used for a long time – O-Ring has adhered to the operating screw and head. | Follow steps 1-2, 4, and 7-8 of the Service Guide. |
| Water does not shut off completely when hydrant is turned off. | Debris between seat and washer. | Follow steps 1-3 and 6-8 of the Service Guide. Clean by turning water supply on and flush hydrant. |
| | Washer is worn out. | Follow steps 1-3 and 5-8 of the Service Guide. |
| | Wire draw in seat. | Replace seat. |
| Hydrant exhibits low flow. | Water supply to hydrant is restricted. | Check water supply to ensure that all upstream valves are fully open. |

Z1335 WALL HYDRANT Service Guide

Z1335 Service Guide

Step 1: Shutting Off the Water Supply to the Hydrant

Locate the supply shut-off valve and rotate until water supply is off.

Step 2: Removing the Face Nut and Adjacent Components

Using crescent wrench or 1-1/2 inch open-end wrench, remove the face nut (2) from head (1) by turning counterclockwise.

Step 3: Removing the Internal Operating Assembly

The internal operating assembly (3-8) can be removed by gripping the square end of the operating screw (3) with a pair of pliers and pulling straight out.

If the operating screw O-Ring was not the reason for service – skip to step 5.

Step 4: Replacing the Operating Screw O-Ring

Remove the operating screw (3) from operating coupling (5) by turning clockwise and slip the old O-Ring (4) off, and replace with new O-Ring (4). Reinstall operating screw (3) into operating coupling (5) by turning counterclockwise. (**Note:** Lubricate the operating screw (5) threads and the O-Ring (4) with Lubriplate FGL-2 if needed.)

If the hydrant shutoff washer was not the reason for service – skip to step 8.

Step 5: Replacing the Hydrant Shutoff Washer

Remove #10-24 NC x 3/8 screw (8) using a flat screwdriver and turning screw (8) counterclockwise, remove washer (7) and replace with new washer (7) and new screw (8) turning screw clockwise until tight.

Step 6: Replacing the Internal Operating Assembly

There is a flat or a V-notched boss inside of the hydrant head (1) that keeps the operating coupling (5) from rotating when hydrant is turned on and off. With operating screw (3) turned counterclockwise into operating coupling (5) until it stops, and making sure that a flat side or corner of operating coupling (5) lines up with appropriate boss, reinsert the internal operating assembly into the hydrant.

Step 7: Replacing the Face Nut

Insert face nut (2) into head (1), and rotate clockwise until hand tight, then using a crescent wrench or 1-1/2 inch open end wrench, snug nut (2) tight.

Step 8: Turning On the Water Supply

Locate the water supply shut-off valve and rotate until water supply is on.

Z1335 WALL HYDRANT 3/4" Hose Connection Chart and Graph

| Z1335 Wall Hydrant – 3/4" Hose Connection | | | | |
|--|------------------------------|-------------------------------|-----------------|---------------------------------|
| Static Pressure (psi) | Running Inlet Pressure (psi) | Running Outlet Pressure (psi) | Flow Rate (gpm) | Pressure Drop Across Unit (psi) |
| 10 | 5.5 | 1.5 | 6.8 | 3.9 |
| 20 | 12.5 | 3.7 | 10.3 | 8.8 |
| 30 | 21.0 | 6.7 | 13.3 | 14.3 |
| 40 | 28.9 | 9.5 | 15.7 | 19.5 |
| 50 | 37.5 | 12.5 | 17.8 | 25.0 |
| 60 | 44.2 | 14.9 | 19.4 | 29.3 |
| 70 | 56.6 | 19.3 | 21.9 | 37.3 |
| 80 | 64.2 | 21.9 | 23.3 | 42.2 |
| 90 | 70.8 | 24.3 | 24.5 | 46.5 |

